


UFT 671 Loading the Firmware


Preparations:

- Connect the receiver and PC together using the connection cable
- Switch the receiver ON


1. Save the file UFT671-v01.01-20070402.bin in any chosen directory
2. Now open the programm „uft671_downloader.exe“
3. You will now see the following mask:

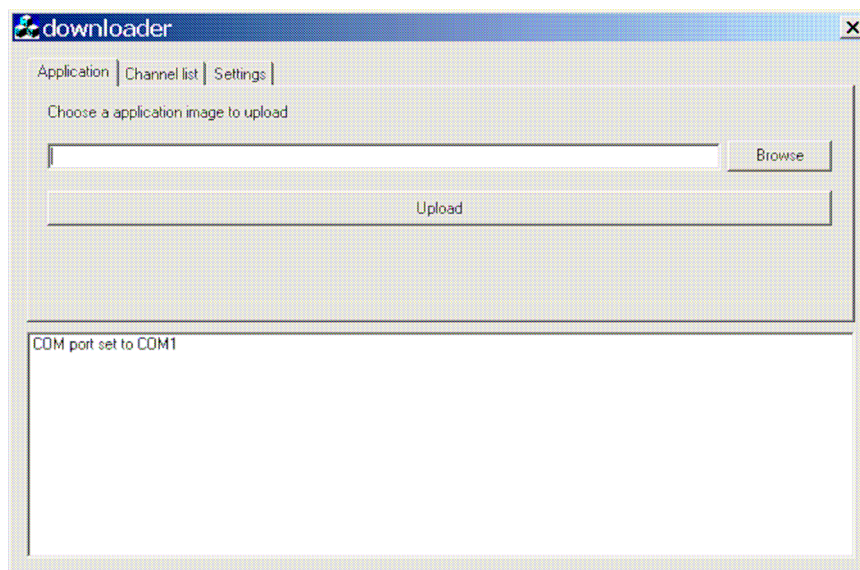

- First select the bookmark „Application“.
 - o In this one sets the COM port to be used.

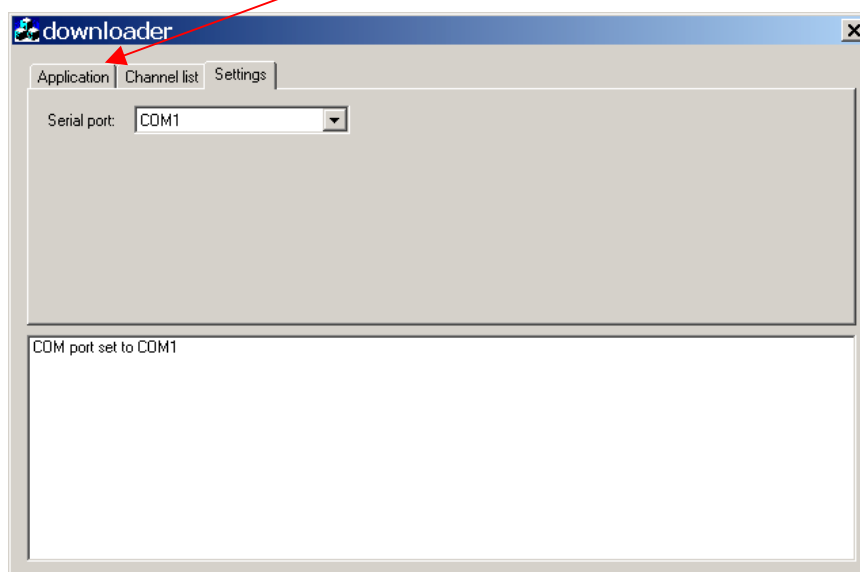


4. Now select the bookmark „Application“.

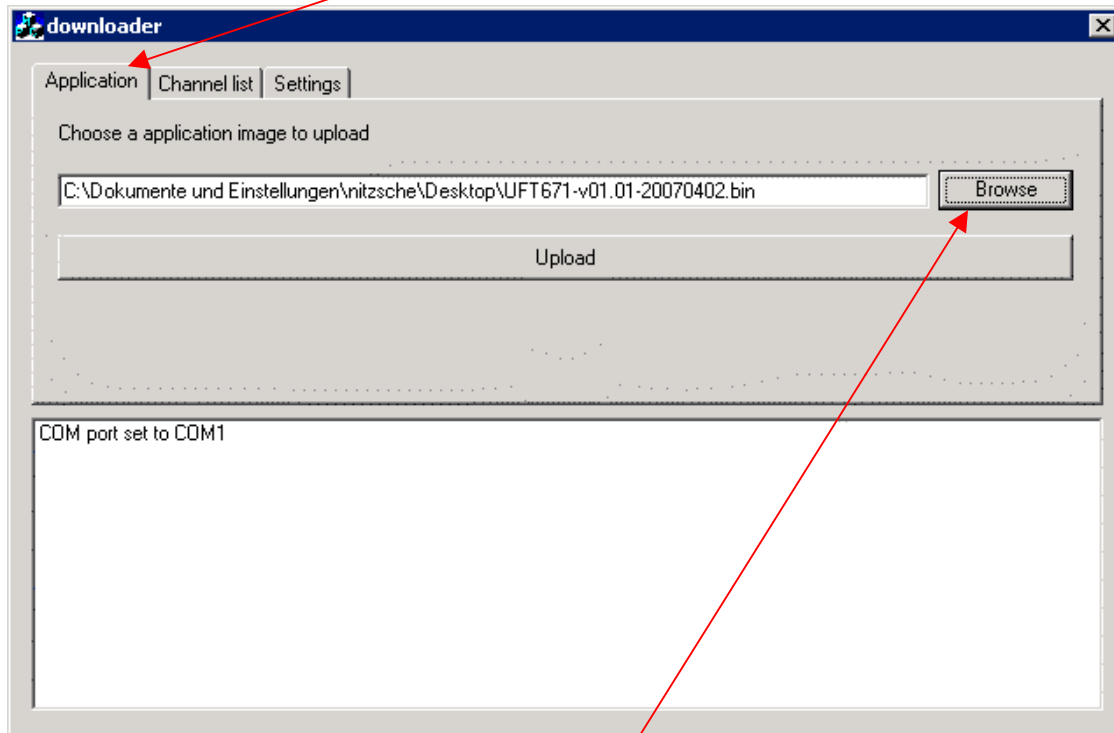


5. Then click on the button „Browse“

6. Now select the firmware „UFT671-v01.01-20070402.bin“

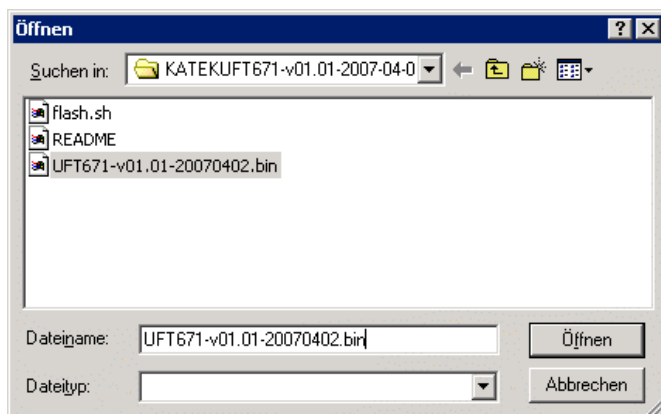

7. Now click on the button „Open“
 8. Now click on the button „Upload“
- Firmware loading will now start

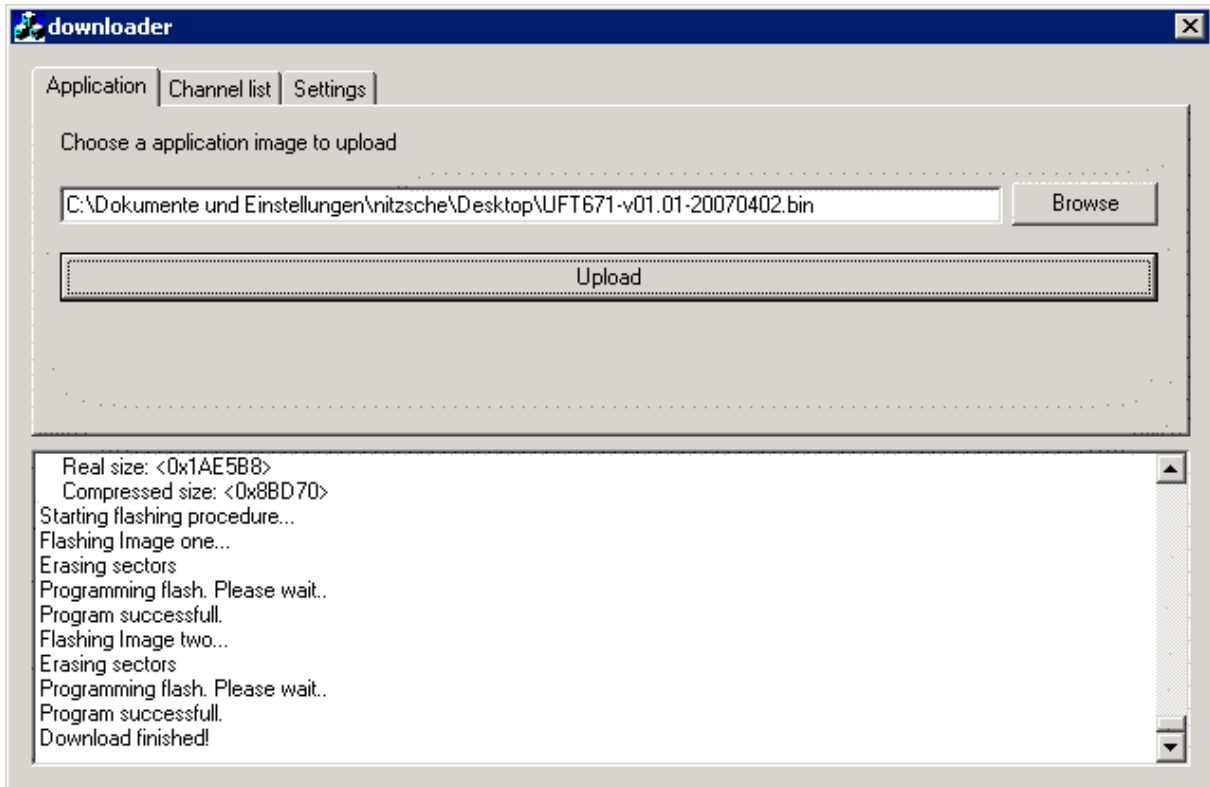

9. When firmware loading has been finished, then you will see the report displayed in the picture above
10. Finally pull the mains plug and re-insert it (mains reset).

On the display „0000“ will be shown during firmware loading.

Firmware updating has now been accomplished. The data connection cable can be removed.